



KNOW THE BEAUTY OF INNOVATION

## Pre-Finish Kit



























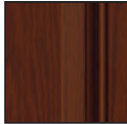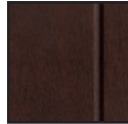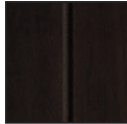

Limited  
5-Year  
Finish  
Warranty

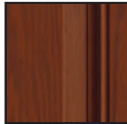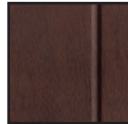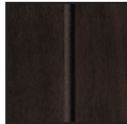Contains everything you need to stain  
**one prehung door and two sidelites**  
or **one double door unit.**

## Stain Color Options:

You can control the shade (lighter or darker) of each of the 7 stain colors during application by varying the amount of stain applied.

\*Actual stain color may vary. For best result, test on skin sample first.

							
	Cherry	Mahogany	Early American	Danish Walnut (Mocha)	Moorish Teak	Charcoal	Spanish Oak
Dark							
Medium							
Light							



KNOW THE BEAUTY OF INNOVATION

## Pre-Finish Kit

- Increase protection and durability to your Plastpro fiberglass entry door.
- Faster drying time with environmental friendly water based top coat.
- Special formula with long lasting vibrant colors.
- Easy do-it-yourself use as well as for professional painters
- Designed exclusively for Plastpro fiberglass entry door.

### Contains everything you need:

ZAR® Exterior Water-Based Polyurethane(qt)  
ZAR® Wood Stain (pt )  
Mineral Spirits (4 oz.)  
Two 2" Foam Brushes  
One 2-1/2" Synthetic Bristle Brush

One Cheese Cloths  
Two Stir Sticks  
One Pair of Latex Gloves  
Two Skin Samples  
Door Staining Instructions



### NORMAL MAINTENANCE

Even a well-finished fiberglass door will be affected by exposure and weathering from sun, moisture, and air pollutants. It is considered normal maintenance to re-apply the topcoat approximately every two years.



### STEP 1: SURFACE PREPARATION

1. Lay door horizontally on saw horses or a table.
2. Remove all the hardware and mask off anything you don't want stained such as the glass insert.
3. DO NOT SAND GRAINED FIBERGLASS
4. Wipe the door with mineral spirits to clean any dust or residue from the surface. Allow door surface to dry completely before applying stain.



### STEP 2: STAIN APPLICATION

#### FIRST COAT

1. Starting at the center of the door, stain one to two panels at a time. Apply stain with Cheese Cloths, or rag. Apply enough stain to fill the door grain.
2. With a clean, lint-free cloth, softly wipe the surface until you reach your desired tone.  
**TIP:** When the rag becomes saturated with stain, re-fold to work with a less-saturated section. Be sure to use the same rag for the whole door.
3. After all the stain is applied evenly you may add finishing touches by using a small 1" to 2" brush or cotton swabs.



#### SECOND COAT (if desired)

Let the stain dry thoroughly per the stain manufacturer's recommendation before applying 2nd coat of stain. Temperature and conditions will affect dry time

### STEP 3: PROTECTIVE TOP COAT

Application of polyurethane top coat with UV inhibitors like ZAR® Exterior Polyurethane, Wood Kote® Flagship UV, or Minwax® Fast Drying Polyurethane for exterior applications

1. After stain has completely dried (per stain manufacturer's directions), mix the top coat well and apply evenly using a clean dry 2 1/2" soft bristle brush or 2" foam brush. Be sure to stop when the grain changes direction.
2. Apply three coats of finish, allowing at least 3 hours of drying time between each application.

