

INCLUDES:

GENERAC® GUARDIAN® SERIES STANDBY GENERATORS - PREPACKAGED

Standby Power Rating

Model 005873-0 (Steel - Bisque) - 17 kW 60Hz Model 005874-0 (Aluminum - Gray) - 17 kW 60Hz

Air-Cooled Gas Engine Generator Sets



Digital Nexus™ Controller

- 16 Circuit EZ Switch™ with Built-In Priority Load Center
- Electronic Governor
- Pre-wired External Connection Box
- External Main Circuit Breaker. System Status & Maintenance Interval LED Indicators and GFCI Duplex Outlet
- Flexible Fuel Line Connector
- Composite Mounting Pad
- Pre-wired conduits
- Natural Gas or LP Gas Operation
- UL 2200 Listed









FEATURES

- INNOVATIVE DESIGN & PROTOTYPE TESTING are key components of GENERAC'S success in "IMPROVING POWER BY DESIGN." But it doesn't stop there. Total commitment to component testing, reliability testing, environmental testing, destruction and life testing, plus testing to applicable CSA, NEMA, EGSA, and other standards, allows you to choose GENERAC POWER SYSTEMS with the confidence that these systems will provide superior performance.
- TRUE POWER® ELECTRICAL TECHNOLOGY: Superior harmonics and sine wave form produce less than 5% Total Harmonic Distortion for utility quality power. This allows confident operation of sensitive electronic equipment and micro-chip based appliances, such as variable speed HVAC.
- TEST CRITERIA:
 - ✓ PROTOTYPE TESTED
- ✓ NEMA MG1-22 EVALUATION
- ✓ SYSTEM TORSIONAL TESTED
- MOTOR STARTING ABILITY

- SOLID-STATE, FREQUENCY COMPENSATED VOLTAGE REGULATION. This state-of-the-art power maximizing regulation system is standard on all Generac models. It provides optimized FAST RESPONSE to changing load conditions and MAXIMUM MOTOR STARTING CAPABILITY by electronically torque-matching the surge loads to the engine. An unequalled $\pm 1\%$ voltage regulation.
- SINGLE SOURCE SERVICE RESPONSE from Generac's extensive dealer network provides parts and service know-how for the entire unit, from the engine to the smallest electronic component.
- GENERAC TRANSFER SWITCHES. Long life and reliability are synonymous with GENERAC POWER SYSTEMS. One reason for this confidence is that the GENERAC product line includes its own transfer systems and controls for total system compatibility.



	•Generac (OHVI) Design	Maximizes engine "breathing" for increased fuel efficiency. Plateau honed cylinder walls and plasma moly rings help engine run cooler, reducing oil consumption. Because heat is the primary cause of engine wear, the OHVI has a significantly longer life than competitive engines.
	• "Spiny-lok" cast iron cylinder walls	Rigid construction and added durability provide long engine life.
ENGINE	•Electronic ignition/spark advance	These features combine to assure smooth, quick starting every time.
Ë	•Full pressure lubrication system	Superior lubrication to all vital bearings means better performance, less maintenance and significantly longer engine life. Now featuring a 2 year/200 hour oil change interval.
	•Low oil pressure shutdown system	Superior shutdown protection prevents catastrophic engine damage due to low oil.
	High temperature shutdown	Prevents damage due to overheating.
GENERATOR	Revolving field	Allows for smaller, light weight unit that operates 25% more efficiently than a revolving armature generator.
	Skewed stator	Produces a smooth output waveform for compatibility with electronic equipment.
	Displaced phase excitation	Maximizes motor starting capability.
Ä	 Automatic voltage regulation 	Regulates the output voltage to $\pm 1\%$ prevents damaging voltage spikes.
	•UL 2200 Listed	For your safety
·	•Fully Automatic	Transfers your vital electrical loads to the energized source of power.
E E	• Pre-wired, color coded conduits	Ensures the easiest, trouble free installation.
TRANSFER SWITCH	• Remote Mounting	Mounts near your existing distribution panel for simple, low cost installation.
≡ ″	•UL Listed	For your safety
	•Manual/Auto/Off switch	Selects the operating mode.
	 Utility voltage sensing 	Constantly monitors utility voltage, setpoints 60% dropout, 80% pick-up, of standard voltage.
(0	 Generator voltage sensing 	Constantly monitors generator voltage to ensure the cleanest power delivered to the home.
CONTROLS	 Utility interrupt delay 	Prevents nuisance start-ups of the engine, adjustable 10-30 seconds.
I NC	•Engine warm-up	Ensures engine is ready to assume the load, setpoint approximately 5 seconds.
	•Engine cool-down	Allows engine to cool prior to shutdown, setpoint approximately 1 minute.
NEXUS™	Programmable seven day exerciser	Operates engine to prevent oil seal drying and damage between power outages by running the generator for 12 minutes every week.
2	•Smart battery charger	Delivers charge to the battery only when needed at varying rates depending on outdoor air temperature.
	Main Line Circuit Breaker	Protects generator from overload.
	Electronic governor	Maintains constant 60 Hz frequency.
E	Weather protective enclosure	Ensures protection against mother nature. Hinged key locking roof panel for security. Lift-out front for easy access to all routine maintenance items. Electrostatically applied textured epoxy paint for added durability.
S	•Enclosed critical grade muffler	Quiet, critical grade muffler is mounted inside the unit to prevent injuries.
	•Small, compact, attractive	Makes for an easy, eye appealing installation.
INSTALLATION SYSTEM	 Pre-wired External Connection Box 1' Flexible Fuel Line Connector Composite Mounting Pad Pre-wired conduits UL Listed wire nuts 	Easy Installation - Virtually all hardware included, plus step-by-step photographed Installation Guide.




GENERATOR	Model 005873-0 (17 kW)	Model 005874-0 (17 kW)
Rated Maximum Continuous Power Capacity (LP)	17,000 Watts*	17,000 Watts*
Rated Maximum Continuous Power Capacity (NG)	16,000 Watts*	16,000 Watts*
Rated Voltage	120/240	120/240
Rated Maximum Continuous Load Current – 240 Volts	70.8 LP/66.6 NG	70.8 LP/66.6 NG
Total Harmonic Distortion	Less than 5%	Less than 5%
Main Line Circuit Breaker	65 Amp	65 Amp
Phase	1	1
Number of Rotor Poles	2	2
Rated AC Frequency	60Hz	60Hz
Power Factor	1	1
Battery Requirement (not included)	Group 26R 12 Volts and 525 Cold-cranking Amperes Minimum	Group 26R 12 Volts and 525 Cold-cranking Amperes Minimum
Unit Weight	455 Pounds	414 Pounds
Dimensions (L" x W" x H")	48 x 25 x 29	48 x 25 x 29
Sound output in dB(A) at 23 ft. with generator operating at normal load	66	66
Sound output in dB(A) at 23 ft. with generator in Quiet-Test™ low speed exercise mode	60	60
ENGINE	Model 005873-0 (17 kW)	Model 005874-0 (17 kW)
Type of Engine	GENERAC OHVI V-TWIN	GENERAC OHVI V-TWIN
Number of Cylinders	2	2
Displacement	992cc	992cc
Cylinder Block	Aluminum w/Cast	Aluminum w/Cast
Oyillidoi DiUON	Iron Sleeve	Iron Sleeve
Valve Arrangement	Overhead Valve	Overhead Valve
Ignition System	Solid-state w/Magneto	Solid-state w/Magneto
Governor System	Electronic	Electronic
Compression Ratio	9.5:1	9.5:1
Starter	12 Vdc	12 Vdc
Oil Capacity Including Filter	Approx. 1.9 Qts./1.8L	Approx. 1.9 Qts/1.8L
Operating RPM	3,600	3,600
Fuel Consumption		
Natural Gas cu.ft./hr.		
1/2 Load	100	100
Full Load	183	183
Liquid Propane ft ³ /hr (gal/hr)	261	261
1/2 Load	59 (1.61)	59 (1.61)
	39 (1.01)	94 (2.57)
	04 (2.57)	
Full Load	94 (2.57) Dlumn for natural gas 10 to 12 inches of water	
Full Load Required fuel pressure to generator fuel inlet at all load ranges - 5 to 7 inches of water c	. ,	
Full Load Required fuel pressure to generator fuel inlet at all load ranges - 5 to 7 inches of water c CONTROLS	olumn for natural gas, 10 to 12 inches of water	column for LP gas
Full Load Required fuel pressure to generator fuel inlet at all load ranges - 5 to 7 inches of water c CONTROLS 2-Line Plain Text LCD Display	. ,	column for LP gas
Full Load Required fuel pressure to generator fuel inlet at all load ranges - 5 to 7 inches of water cocontrols 2-Line Plain Text LCD Display Mode Switch	olumn for natural gas, 10 to 12 inches of water Simple user interface	column for LP gas for ease of operation
Full Load Required fuel pressure to generator fuel inlet at all load ranges - 5 to 7 inches of water c CONTROLS 2-Line Plain Text LCD Display Mode Switch -Auto	olumn for natural gas, 10 to 12 inches of water Simple user interface Automatic Start on Utility	column for LP gas for ease of operation failure. 7 day exerciser
Full Load Required fuel pressure to generator fuel inlet at all load ranges - 5 to 7 inches of water c CONTROLS 2-Line Plain Text LCD Display Mode Switch -Auto -Off	olumn for natural gas, 10 to 12 inches of water Simple user interface Automatic Start on Utility Stops unit. Power is removed. C	for ease of operation failure. 7 day exerciser ontrol and charger still operate.
Full Load Required fuel pressure to generator fuel inlet at all load ranges - 5 to 7 inches of water c CONTROLS 2-Line Plain Text LCD Display Mode Switch -Auto	olumn for natural gas, 10 to 12 inches of water Simple user interface Automatic Start on Utility	for ease of operation failure. 7 day exerciser ontrol and charger still operate.
Full Load Required fuel pressure to generator fuel inlet at all load ranges - 5 to 7 inches of water c CONTROLS 2-Line Plain Text LCD Display Mode Switch -Auto -Off -Manual/Test (start)	Simple user interface Automatic Start on Utility Stops unit. Power is removed. C Start with starter control, unit stays on. If	for ease of operation failure. 7 day exerciser ontrol and charger still operate. utility fails, transfer to load takes place. dard
Full Load Required fuel pressure to generator fuel inlet at all load ranges - 5 to 7 inches of water c CONTROLS 2-Line Plain Text LCD Display Mode Switch -Auto -Off -Manual/Test (start) Programmable start delay between 10-30 seconds	Simple user interface Automatic Start on Utility Stops unit. Power is removed. C Start with starter control, unit stays on. If	for ease of operation failure. 7 day exerciser ontrol and charger still operate. utility fails, transfer to load takes place. dard
Full Load Required fuel pressure to generator fuel inlet at all load ranges - 5 to 7 inches of water c CONTROLS 2-Line Plain Text LCD Display Mode Switch -Auto -Off -Manual/Test (start) Programmable start delay between 10-30 seconds Engine Start Sequence	Simple user interface Automatic Start on Utility Stops unit. Power is removed. C Start with starter control, unit stays on. If	for ease of operation failure. 7 day exerciser ontrol and charger still operate. utility fails, transfer to load takes place. dard st (90 sec. maximum duration)
Full Load Required fuel pressure to generator fuel inlet at all load ranges - 5 to 7 inches of water c CONTROLS 2-Line Plain Text LCD Display Mode Switch -Auto -Off -Manual/Test (start) Programmable start delay between 10-30 seconds Engine Start Sequence Engine Warm-up	Simple user interface Automatic Start on Utility Stops unit. Power is removed. C Start with starter control, unit stays on. If Stanc Cyclic cranking: 16 sec. on, 7 re	for ease of operation failure. 7 day exerciser ontrol and charger still operate. utility fails, transfer to load takes place. dard st (90 sec. maximum duration) onds
Full Load Required fuel pressure to generator fuel inlet at all load ranges - 5 to 7 inches of water c CONTROLS 2-Line Plain Text LCD Display Mode Switch -Auto -Off -Manual/Test (start) Programmable start delay between 10-30 seconds Engine Start Sequence Engine Warm-up Engine Cool-Down	Simple user interface Automatic Start on Utility Stops unit. Power is removed. C Start with starter control, unit stays on. If Stanc Cyclic cranking: 16 sec. on, 7 re 5 sec. 1 mir	for ease of operation failure. 7 day exerciser ontrol and charger still operate. utility fails, transfer to load takes place. dard st (90 sec. maximum duration) onds nute
Full Load Required fuel pressure to generator fuel inlet at all load ranges - 5 to 7 inches of water c CONTROLS 2-Line Plain Text LCD Display Mode Switch -Auto -Off -Manual/Test (start) Programmable start delay between 10-30 seconds Engine Start Sequence Engine Warm-up Engine Cool-Down Starter Lock-out	Simple user interface Automatic Start on Utility Stops unit. Power is removed. C Start with starter control, unit stays on. If Stanc Cyclic cranking: 16 sec. on, 7 re 5 sec. 1 min Starter cannot re-engage until 5	for ease of operation I failure. 7 day exerciser control and charger still operate. utility fails, transfer to load takes place. dard st (90 sec. maximum duration) onds nute sec. after engine has stopped.
Full Load Required fuel pressure to generator fuel inlet at all load ranges - 5 to 7 inches of water c CONTROLS 2-Line Plain Text LCD Display Mode Switch -Auto -Off -Manual/Test (start) Programmable start delay between 10-30 seconds Engine Start Sequence Engine Warm-up Engine Cool-Down Starter Lock-out Smart Battery Charger	Simple user interface Automatic Start on Utility Stops unit. Power is removed. C Start with starter control, unit stays on. If Stanc Cyclic cranking: 16 sec. on, 7 re 5 sec. 1 min Starter cannot re-engage until 5 Stanc	for ease of operation failure. 7 day exerciser control and charger still operate. utility fails, transfer to load takes place. dard st (90 sec. maximum duration) onds nute sec. after engine has stopped. dard
Full Load Required fuel pressure to generator fuel inlet at all load ranges - 5 to 7 inches of water c CONTROLS 2-Line Plain Text LCD Display Mode Switch -Auto -Off -Manual/Test (start) Programmable start delay between 10-30 seconds Engine Start Sequence Engine Warm-up Engine Cool-Down Starter Lock-out Smart Battery Charger Automatic Voltage Regulation with Over and Under Voltage Protection	Simple user interface Automatic Start on Utility Stops unit. Power is removed. C Start with starter control, unit stays on. If Stanc Cyclic cranking: 16 sec. on, 7 re 5 sec. 1 min Starter cannot re-engage until 5 Stanc Stanc	for ease of operation failure. 7 day exerciser ontrol and charger still operate. utility fails, transfer to load takes place. dard st (90 sec. maximum duration) onds nute sec. after engine has stopped. dard dard
Full Load Required fuel pressure to generator fuel inlet at all load ranges - 5 to 7 inches of water c CONTROLS 2-Line Plain Text LCD Display Mode Switch -Auto -Off -Manual/Test (start) Programmable start delay between 10-30 seconds Engine Start Sequence Engine Warm-up Engine Cool-Down Starter Lock-out Smart Battery Charger Automatic Voltage Regulation with Over and Under Voltage Protection Automatic Low Oil Pressure Shutdown	Simple user interface Automatic Start on Utility Stops unit. Power is removed. C Start with starter control, unit stays on. If Stanc Cyclic cranking: 16 sec. on, 7 re 5 sec. 1 min Starter cannot re-engage until 5 Stanc Stanc	for ease of operation I failure. 7 day exerciser control and charger still operate. utility fails, transfer to load takes place. dard st (90 sec. maximum duration) onds nute sec. after engine has stopped. dard dard dard
Full Load Required fuel pressure to generator fuel inlet at all load ranges - 5 to 7 inches of water c CONTROLS 2-Line Plain Text LCD Display Mode Switch -Auto -Off -Manual/Test (start) Programmable start delay between 10-30 seconds Engine Start Sequence Engine Warm-up Engine Cool-Down Starter Lock-out Smart Battery Charger Automatic Voltage Regulation with Over and Under Voltage Protection Automatic Low Oil Pressure Shutdown Overspeed Shutdown	Simple user interface Automatic Start on Utility Stops unit. Power is removed. C Start with starter control, unit stays on. If Stanc Cyclic cranking: 16 sec. on, 7 re 5 sec. 1 min Starter cannot re-engage until 5 Stanc Stanc Stand	for ease of operation I failure. 7 day exerciser control and charger still operate. utility fails, transfer to load takes place. dard st (90 sec. maximum duration) onds nute sec. after engine has stopped. dard dard dard dard d, 72Hz
Full Load Required fuel pressure to generator fuel inlet at all load ranges - 5 to 7 inches of water c CONTROLS 2-Line Plain Text LCD Display Mode Switch -Auto -Off -Manual/Test (start) Programmable start delay between 10-30 seconds Engine Start Sequence Engine Warm-up Engine Cool-Down Starter Lock-out Smart Battery Charger Automatic Voltage Regulation with Over and Under Voltage Protection Automatic Low Oil Pressure Shutdown Overspeed Shutdown High Temperature Shutdown	Simple user interface Automatic Start on Utility Stops unit. Power is removed. C Start with starter control, unit stays on. If Stanc Cyclic cranking: 16 sec. on, 7 re 5 sec. 1 min Starter cannot re-engage until 5 Stanc Stanc Stanc Stand Stand Stand Stand Stand	column for LP gas for ease of operation failure. 7 day exerciser ontrol and charger still operate. utility fails, transfer to load takes place. dard st (90 sec. maximum duration) onds nute sec. after engine has stopped. dard dard dard dard d, 72Hz dard
Full Load Required fuel pressure to generator fuel inlet at all load ranges - 5 to 7 inches of water c CONTROLS 2-Line Plain Text LCD Display Mode Switch -Auto -Off -Manual/Test (start) Programmable start delay between 10-30 seconds Engine Start Sequence Engine Warm-up Engine Cool-Down Starter Lock-out Smart Battery Charger Automatic Voltage Regulation with Over and Under Voltage Protection Automatic Low Oil Pressure Shutdown Overspeed Shutdown High Temperature Shutdown Overcrank Protection	Simple user interface Automatic Start on Utility Stops unit. Power is removed. C Start with starter control, unit stays on. If Stanc Cyclic cranking: 16 sec. on, 7 re 5 sec. 1 min Starter cannot re-engage until 5 Stanc Stanc Stanc Stand Stand Stand Stand Stand Stand Stand	column for LP gas for ease of operation failure. 7 day exerciser ontrol and charger still operate. utility fails, transfer to load takes place. dard st (90 sec. maximum duration) onds nute sec. after engine has stopped. dard dard dard d, 72Hz dard dard
Full Load Required fuel pressure to generator fuel inlet at all load ranges - 5 to 7 inches of water c CONTROLS 2-Line Plain Text LCD Display Mode Switch -Auto -Off -Manual/Test (start) Programmable start delay between 10-30 seconds Engine Start Sequence Engine Warm-up Engine Cool-Down Starter Lock-out Smart Battery Charger Automatic Voltage Regulation with Over and Under Voltage Protection Automatic Low Oil Pressure Shutdown Overspeed Shutdown High Temperature Shutdown Overcrank Protection Safety Fuse	Simple user interface Automatic Start on Utility Stops unit. Power is removed. C Start with starter control, unit stays on. If Stanc Cyclic cranking: 16 sec. on, 7 re 5 sec. 1 min Starter cannot re-engage until 5 Stanc Stanc Stanc Stanc Stand Stand Stand Stand Stand Stand Stand Stand	column for LP gas for ease of operation failure. 7 day exerciser ontrol and charger still operate. utility fails, transfer to load takes place. dard st (90 sec. maximum duration) onds nute sec. after engine has stopped. dard dard dard dard dard dard dard da
Full Load Required fuel pressure to generator fuel inlet at all load ranges - 5 to 7 inches of water c CONTROLS 2-Line Plain Text LCD Display Mode Switch -Auto -Off -Manual/Test (start) Programmable start delay between 10-30 seconds Engine Start Sequence Engine Warm-up Engine Cool-Down Starter Lock-out Smart Battery Charger Automatic Voltage Regulation with Over and Under Voltage Protection Automatic Low Oil Pressure Shutdown Overspeed Shutdown High Temperature Shutdown Overcrank Protection Safety Fuse Failure to Transfer Protection	Simple user interface Automatic Start on Utility Stops unit. Power is removed. C Start with starter control, unit stays on. If Stanc Cyclic cranking: 16 sec. on, 7 re 5 sec. 1 min Starter cannot re-engage until 5 Stanc	column for LP gas for ease of operation failure. 7 day exerciser ontrol and charger still operate. utility fails, transfer to load takes place. dard st (90 sec. maximum duration) onds nute sec. after engine has stopped. dard dard dard dard dard dard dard da
Full Load Required fuel pressure to generator fuel inlet at all load ranges - 5 to 7 inches of water c CONTROLS 2-Line Plain Text LCD Display Mode Switch -Auto -Off -Manual/Test (start) Programmable start delay between 10-30 seconds Engine Start Sequence Engine Warm-up Engine Cool-Down Starter Lock-out Smart Battery Charger Automatic Voltage Regulation with Over and Under Voltage Protection Automatic Low Oil Pressure Shutdown Overspeed Shutdown High Temperature Shutdown Overcrank Protection Safety Fuse Failure to Transfer Protection Low Battery Protection	Simple user interface Automatic Start on Utility Stops unit. Power is removed. C Start with starter control, unit stays on. If Stanc Cyclic cranking: 16 sec. on, 7 re 5 sec. 1 min Starter cannot re-engage until 5 Stanc Stanc Stanc Stanc Stand Stand Stand Stand Stand Stand Stand Stand	column for LP gas for ease of operation failure. 7 day exerciser ontrol and charger still operate. utility fails, transfer to load takes place. dard st (90 sec. maximum duration) onds nute sec. after engine has stopped. dard dard dard dard dard dard dard da
Full Load Required fuel pressure to generator fuel inlet at all load ranges - 5 to 7 inches of water c CONTROLS 2-Line Plain Text LCD Display Mode Switch -Auto -Off	Simple user interface Automatic Start on Utility Stops unit. Power is removed. C Start with starter control, unit stays on. If Stanc Cyclic cranking: 16 sec. on, 7 re 5 sec. 1 min Starter cannot re-engage until 5 Stanc	for ease of operation I failure. 7 day exerciser control and charger still operate. utility fails, transfer to load takes place. dard st (90 sec. maximum duration) conds nute sec. after engine has stopped. dard dard dard dard dard dard dard da
Full Load Required fuel pressure to generator fuel inlet at all load ranges - 5 to 7 inches of water c CONTROLS 2-Line Plain Text LCD Display Mode Switch -Auto -Off -Manual/Test (start) Programmable start delay between 10-30 seconds Engine Start Sequence Engine Warm-up Engine Cool-Down Starter Lock-out Smart Battery Charger Automatic Voltage Regulation with Over and Under Voltage Protection Automatic Low Oil Pressure Shutdown Overspeed Shutdown High Temperature Shutdown Overcrank Protection Safety Fuse Failure to Transfer Protection Low Battery Protection 50 Event Run Log	Simple user interface Automatic Start on Utility Stops unit. Power is removed. C Start with starter control, unit stays on. If Stanc Cyclic cranking: 16 sec. on, 7 re 5 sec. 1 min Starter cannot re-engage until 5 Stanc	for ease of operation I failure. 7 day exerciser control and charger still operate. utility fails, transfer to load takes place. dard st (90 sec. maximum duration) conds nute sec. after engine has stopped. dard dard dard dard dard dard dard da
Full Load Required fuel pressure to generator fuel inlet at all load ranges - 5 to 7 inches of water c CONTROLS 2-Line Plain Text LCD Display Mode Switch -Auto -Off -Manual/Test (start) Programmable start delay between 10-30 seconds Engine Start Sequence Engine Warm-up Engine Cool-Down Starter Lock-out Smart Battery Charger Automatic Voltage Regulation with Over and Under Voltage Protection Automatic Low Oil Pressure Shutdown Overspeed Shutdown High Temperature Shutdown Overcrank Protection Safety Fuse Failure to Transfer Protection Low Battery Protection 50 Event Run Log Future Set Capable Exerciser	Simple user interface Automatic Start on Utility Stops unit. Power is removed. C Start with starter control, unit stays on. If Stanc Cyclic cranking: 16 sec. on, 7 re 5 sec. 1 min Starter cannot re-engage until 5 Stanc	for ease of operation I failure. 7 day exerciser control and charger still operate. utility fails, transfer to load takes place. dard st (90 sec. maximum duration) conds nute sec. after engine has stopped. dard dard dard dard dard dard dard da
Full Load Required fuel pressure to generator fuel inlet at all load ranges - 5 to 7 inches of water c CONTROLS 2-Line Plain Text LCD Display Mode Switch -Auto -Off -Manual/Test (start) Programmable start delay between 10-30 seconds Engine Start Sequence Engine Warm-up Engine Cool-Down Starter Lock-out Smart Battery Charger Automatic Voltage Regulation with Over and Under Voltage Protection Automatic Low Oil Pressure Shutdown Overspeed Shutdown High Temperature Shutdown Overcrank Protection Safety Fuse Failure to Transfer Protection Low Battery Protection 50 Event Run Log	Simple user interface Automatic Start on Utility Stops unit. Power is removed. C Start with starter control, unit stays on. If Stanc Cyclic cranking: 16 sec. on, 7 re 5 sec. 1 min Starter cannot re-engage until 5 Stanc	for ease of operation I failure. 7 day exerciser control and charger still operate. utility fails, transfer to load takes place. dard st (90 sec. maximum duration) conds nute sec. after engine has stopped. dard dard dard dard dard dard dard da

EZ SWITCH™ & Load center	Model 005873-0 (17 kW)	Model 005874-0 (17 kW)
No. of Poles	2	2
Current Rating (amps)	100	100
Voltage Rating (VAC)	250	250
Utility Voltage Monitor (fixed)		
-Pick-up	80%	80%
-Dropout	60%	60%
Return to Utility	approx. 15 sec.	approx. 15 sec.
Exerciser weekly for 12 minutes	Standard	Standard
UL Listed	Standard	Standard
Dimensions (H" x W" x D")	26.5 x 12.5 x 7	26.5 x 12.5 x 7
Total of Pre-wired Circuits	16	16
No. 15A 120V	5	5
No. 20A 120V	5	5
No. 20A 240V	1	1
No. 40A 240V	1	1
No. 50A 240V	1	1
Circuit Breaker Protected Available RMS Symmetrical		
Fault Current @ 250 Volts	10,000	10,000

EZ Switch™ Features


- Electrically operated, mechanically-held contacts for fast, positive connections.
- Rated for all classes of load, 100% equipment rated, both inductive and resistive.
- 2 pole, 250 VAC contactors.
- 160 millisecond transfer time.
- · Dual coil design.
- Main contacts are silver plated or silver alloy to resist welding and sticking.
- NEMA 1 (indoor rated) enclosure is standard on the 100 amp switch.
- Pre-wired 30 foot whip to connect to the pre-wired external connection box.
- Pre-wired 2 foot whip, color coded to connect into the existing electrical panel.

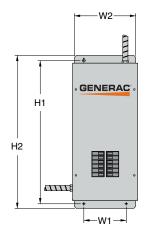

Mechanical Dimensions (in inches)						
Current	No. of	Hei	ght	Wie	dth	Depth
Rating	Poles	H1	H2	W1	W2	
100 UL Listed	2	26.5	29.25	8.14	12.5	7

Terminal Wire Ranges					
ATS Rated Amps	Switch Terminal	Neutral Lug/Stud	Ground Lug		
100A 2-Pole UL	1 x 1/0-12	1 x 3/8-16 Stud	1 x 2/0-14		

Design and specifications subject to change without notice. Dimensions shown are approximate. Contact your Generac dealer for certified drawings. DO NOT USE THESE DIMENSIONS FOR INSTALLATION PURPOSES.

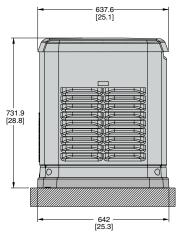

LEFT SIDE VIEW

